




XTECH™
TACTICAL

MADE IN USA



HK-VP9SK & P30SK 9MM

10 TO 12 ROUND CONVERSION KIT

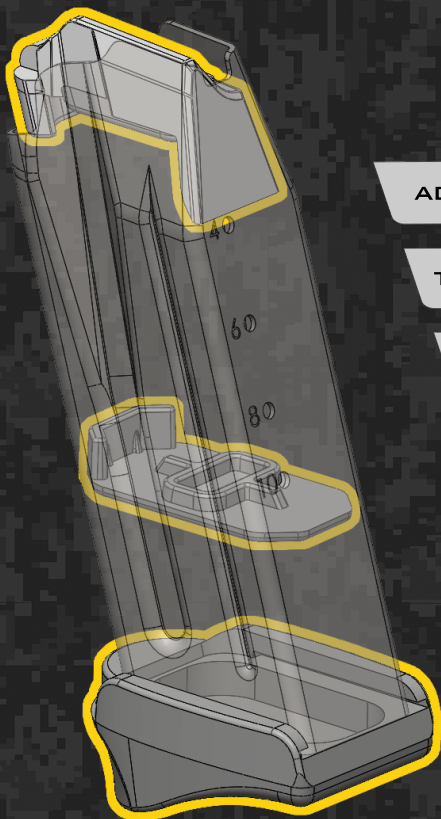

ADDITIONAL TWO ROUNDS

TOOL FREE INSTALLATION

RUGGED CONSTRUCTION



WWW.XTECHTACTICAL.COM

HK VP9 & P30

12RD CONVERSION KIT




WARNING

ENSURE WEAPON IS UNLOADED AND CHAMBER IS EMPTY BEFORE STARTING DISASSEMBLY.

ASSEMBLY INSTRUCTIONS


WARNING: READ BEFORE USE. PRACTICE SAFE FIREARM HANDLING AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. XTECH TACTICAL, LLC SHALL NOT BE HELD RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM THE USE, ILLEGAL USE, MISUSE, FAULTY INSTALLATION, OR MODIFICATION OF THIS PRODUCT.

STEP 1

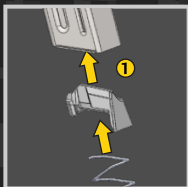


USING YOUR EXISTING VP9SK OR P30SK 10RD SPRING AND BODY INSTALL XTECH 12RD FOLLOWER (1) ON TOP OF SPRING AND SLIDE SPRING AND FOLLOWER UP INTO MAGAZINE BODY.

STEP 2

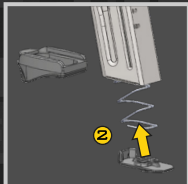

PLACE XTECH 12RD SPRING BUTTON (2) ON BOTTOM OF SPRING WITH VERTICAL TAB FORWARD AS SHOWN AND COMPRESS UP INTO MAGAZINE BODY.

STEP 3

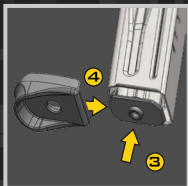

WHILE HOLDING THE SPRING AND SPRING BUTTON UP INSIDE MAG BODY (3) SLIDE THE XTECH 12RD BASE PLATE INTO PLACE. THE SPRING BUTTON SHOULD POP INTO HOLE IN BASE PLATE.

©2020 XTECH TACTICAL LLC:
TRADEMARKS ARE PROPERTY
OF XTECH TACTICAL, LLC.
ALL RIGHTS RESERVED.
PATENT PENDING

XTT133-BLK VP9SK 2RD



8 56822 00768 6